

- D. Dial the complete telephone number, including pauses. Each pause entered will provide 2 seconds of pause in the dialing sequence.
- E. Press the asterisk (*) key twice.
- F. Hang up to complete programming or repeat steps B through E to continue entering additional system speed dial numbers.

*NOTE: To program a flash into system speed dial numbers, use the FLASH button. To program a pause use the PICKUP button. To protect confidential numbers in speed dial memories, the HOLD button may be pressed before entering the telephone number. All digits stored after that will not be displayed and the NO DISPLAY prompt will appear on the LCD.
The * and the # may be entered as actual digits in speed dial numbers.*

700.112 PROGRAMMING SYSTEM TIME AND DATE

The system date and time are displayed on the NC-1648 LCD Display Phone and must be programmed from the attendant's station keyset (10). The following steps should be taken when programming system date and time.

- A. At station 10, lift handset or press ON/OFF button.
- B. Press the asterisk (*) key twice.
- C. Dial the two digit program code "46" on the dial pad.
- D. Enter the system date and time on the dial pad in the following format:
YY/MM/DD/HH/MM where
YY = last 2 digits of year in the range 80-99
MM = month in the range 01-12
DD = day in the range 01-31
HH = hours in the range 00-23
MM = minutes in the range 00-59
- E. Hang up to complete programming.